Brief instructions for use Models S 962-2, S 962-2W from year of construction 05/2009

NOTKEB


A. Side rails

Raising the side rails


- Pull the side rail element out horizontally until the end stop, and fold it upwards.
- To adjust the height of the side rail, pull the telescopic section upwards until it reaches its end stop.

Lowering the side rails

- Press both buttons on the outside of the frame (fig. 1), just under the crossmember, to bring the height-adjustable rail element to its lowest position.
- Press the "Drücken / Press" trigger at the lower edge of the side rail element (fig. 2) and tilt it sideways into the horizontal plane, so that it lies parallel to the floor.
- 3. Push the rail element completely underneath the lying surface (fig. 3a, fig. 3b).

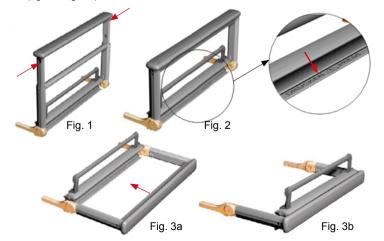

B. Hand control

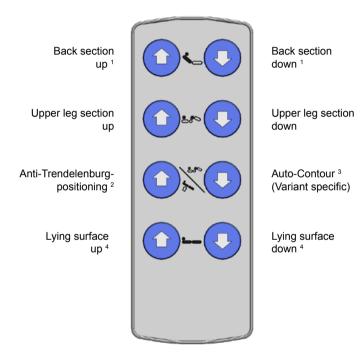

¹ The Völker diagnostics system (optional) allows a time between 0 and 5 seconds delay to set the back rest movement to the 30° position (Function is variant specific).



² Leg end lowered

³ Back and upper leg section raised simultaneously

⁴ Pressing the "Lying surface up" and "Lying surface down" buttons simultaneously brings the bed into the horizontal position (Function is variant specific).

Brief instructions for use Models S 962-2, S 962-2W from year of construction 05/2009

C. Hand control key lock

Activating the hand control key lock disables all of the functions of the hand control.




Hand control locked



Hand control unlocked

The hand control can also be locked with the button "lock hand control" (14) on the nurse keypad.

D. Nurse keypad with individual lock/automatic functions

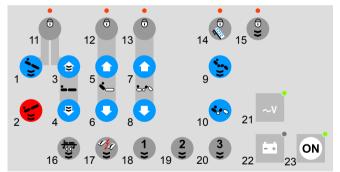

- Anti-Trendelenburg positioning A, L
- Trendelenburg positioning B, L
- Lying surface up C, L
- Lying surface down C, L
- Back section up D
- Back section down D
- Upper leg section up

- Upper leg section down Cardiac chair position L
- 10 Auto-Contour E
- 11 Lock lying surface lift and anti-Trendelenburg positioning
- 12 Lock back section
- 13 Lock upper leg section

- 14 Lock hand control
- 15 Lock automatic functions
- 16 Transport position L
- 17 Resuscitation position L
- Automatic washing system position F, L
- 19 Manual washing G, L
- 20 Bed preparation H, L 21 Mains voltage display 1
- 22 Battery display J
- 23 On Swich K

- A Lea end lowered
- ^B Head end lowered
- ^c Pressing buttons 3 and 4 simultaneously brings the bed into the horizontal position (Function is variant
- ^D The Völker diagnostics system (optional) allows a time between 0 and 5 seconds delay to set the back rest movement to the 30° position (Function is variant specific).
- Back and upper leg section raised simultaneously
- Height 80 cm, Anti-Trendelenburg-positioning 5°, back section 25°
- ⁶ Height 80 cm, back and leg sections max, engaged
- H Height 80 cm, back and leg sections in zero position
- green: mains voltage is on
- green: >80% charged; yellow: 30-80% charged; red: discharged; flashing: charging
- K After pressing the "on" button, the keypad is available for up to 120 seconds after the last action, then it goes into stand-by mode.
- L automatic function with double click possible on a country-by-country basis

NOTE Please note that to operate the bed, the nurse keypad must be switched on by pressing the on switch. If no electric function can be activated, press the Reset button on the motor housing.

→ S 962-2 (DA01), S 962-2W: Then press the green button on the mains isolation after 10 seconds in order to reactivate the bed. Never press both green buttons at the same time

NOTE The S 962-2 model corresponds to protection class IPX4 (splashproof) and is therefore not suitable for cleaning in automatic washing systems.

The S 962-2W model corresponds to protection class IPX6 (highly sprayproof) and is suitable for cleaning in automatic washing systems (IPX6).

NOTE Please observe the notes in the detailed instructions for use!

